




- Disconnect the battery
- Remove the **left** pillar cover (picture shows the right hand one):

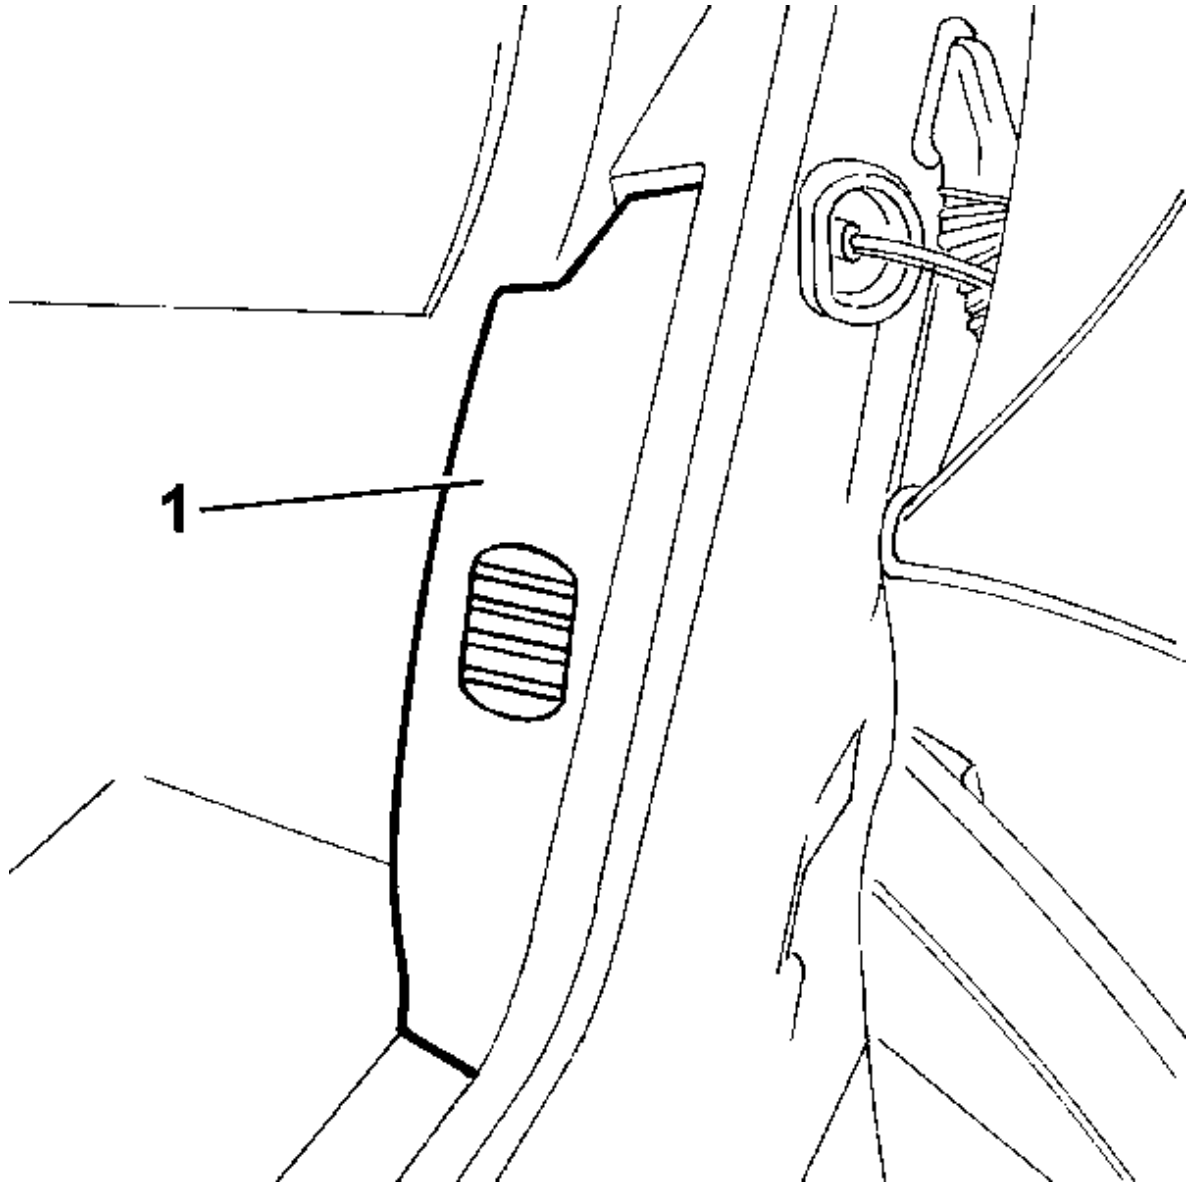


- Release the instrument panel left side trim and remove it:

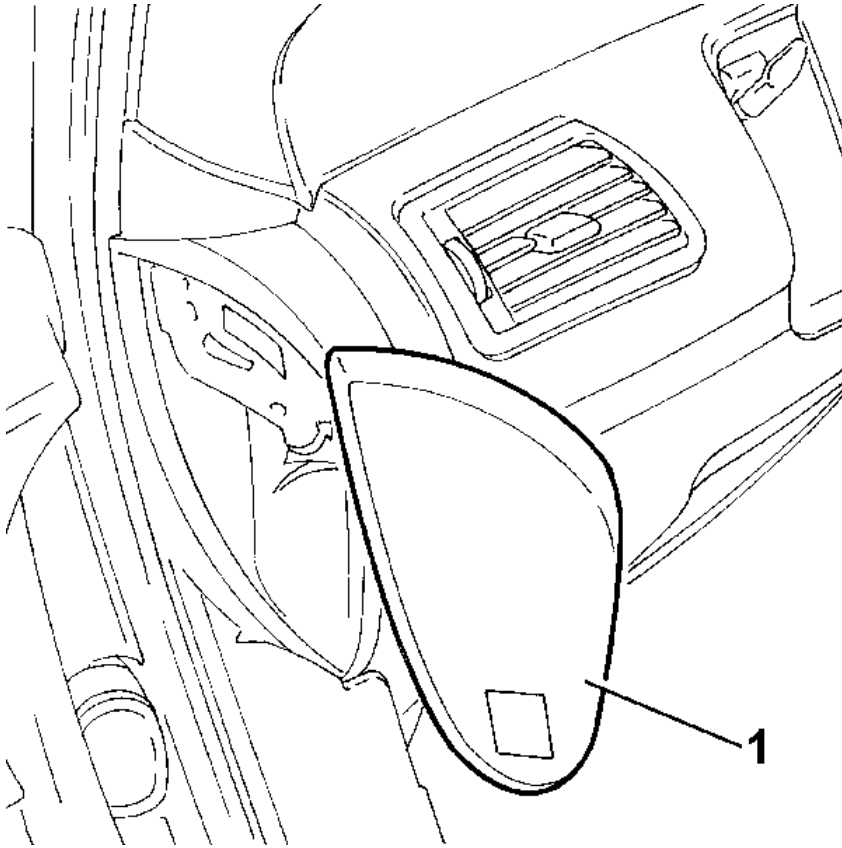


- Remove the left side trim:

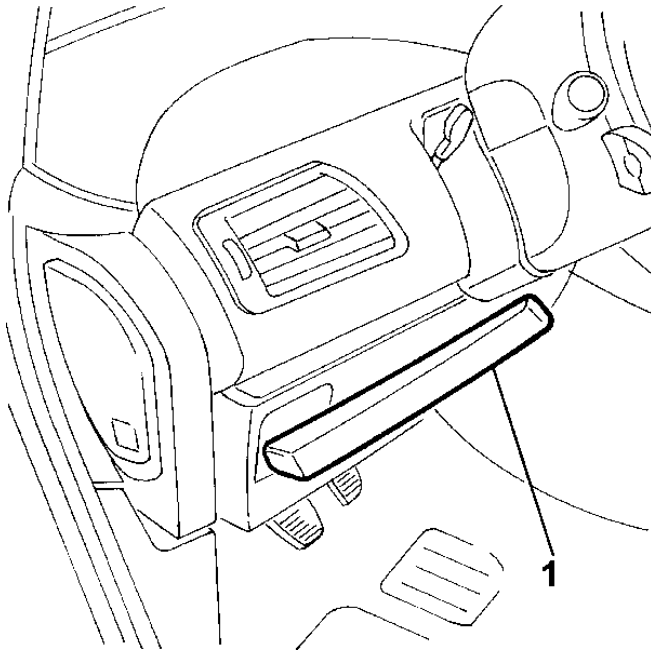


- Remove the oddments pocket under dashboard:
- 1. - Act on the springs and partly extract the oddments compartment housing from the trim under the dashboard.
- 2. - Disconnect the diagnostic socket electrical connection.
- 3. - Remove the connector holder trim complete with diagnostic socket.
- 4. - Remove the oddments compartment housing.

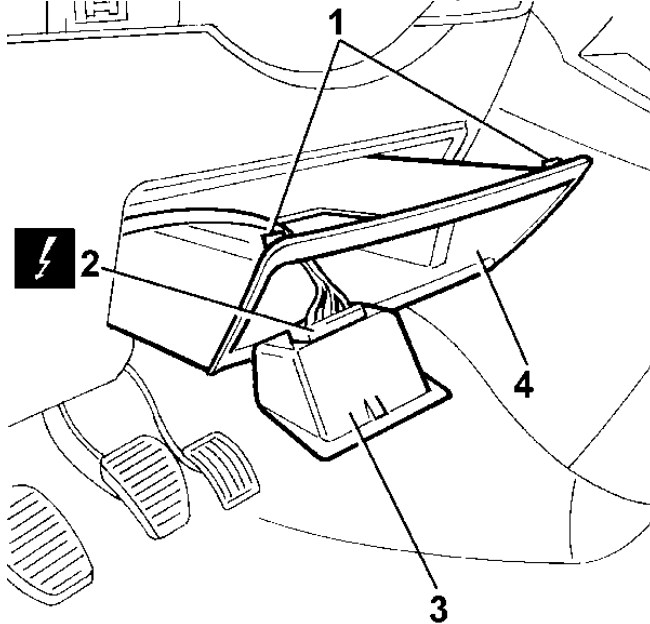


- Remove the under facia trim:
- 1. -Release the fixing buttons
- 2. -Remove the lower trim

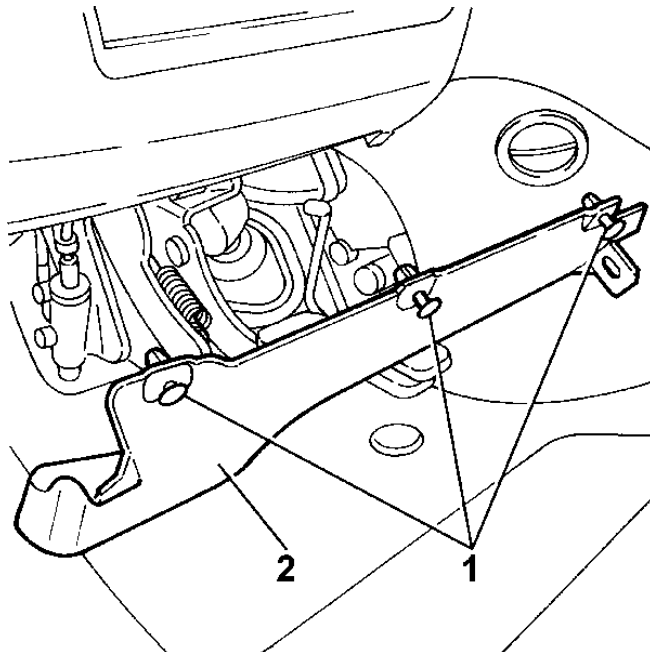


1. - Undo the retaining bolts.
- Partly extract the trim under the dashboard.
2. - Disconnect the electrical connections.
3. - Remove the underdashboard trim.

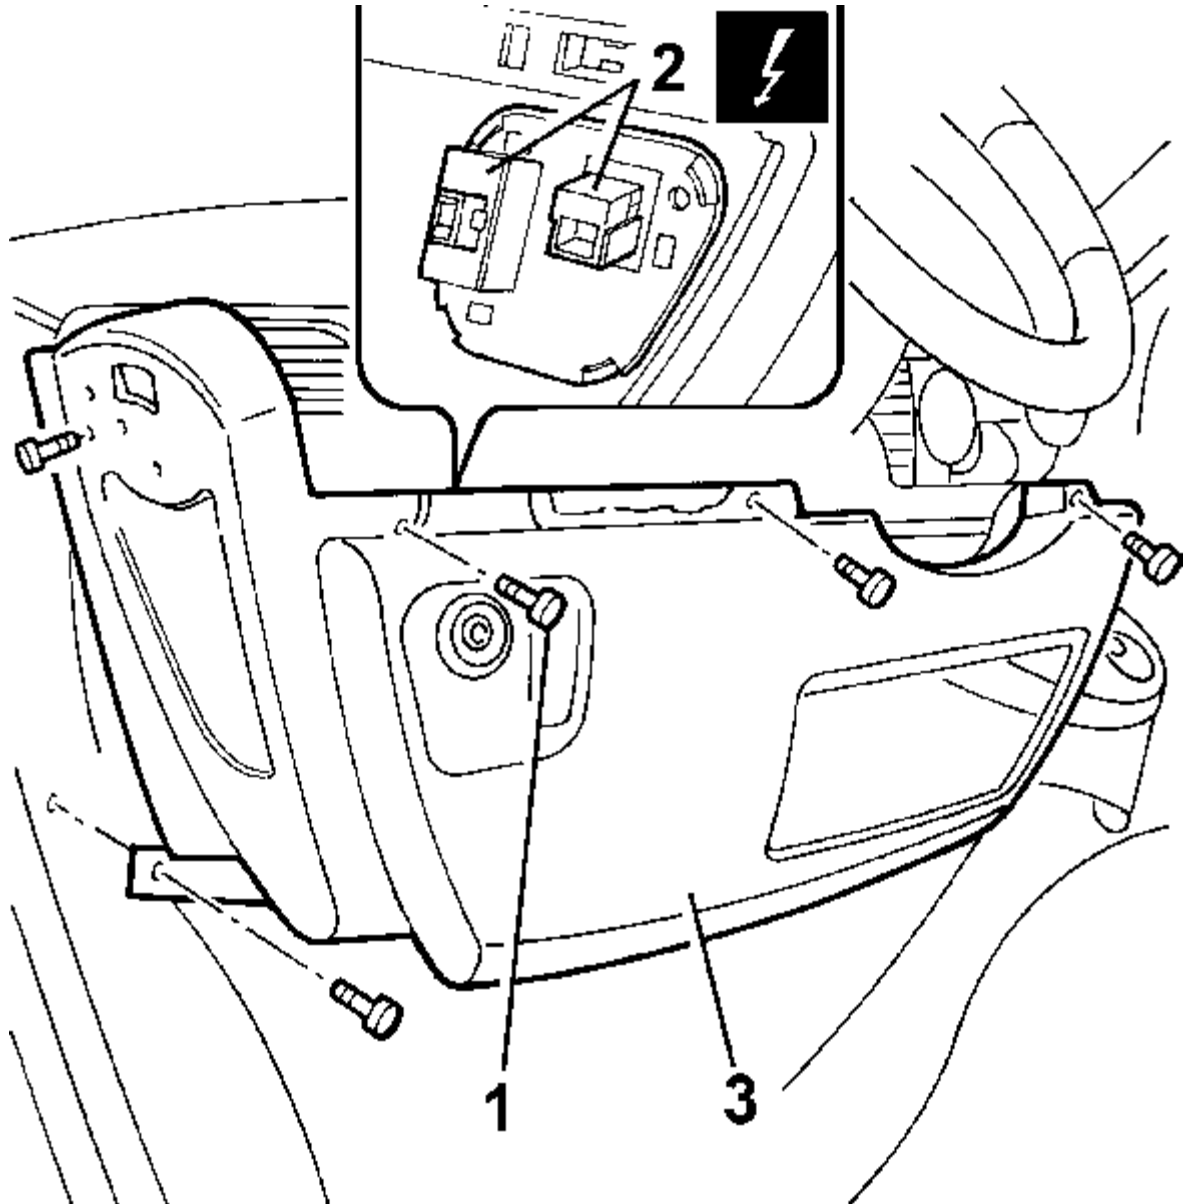


- Remove the air duct (left hand side, picture shows right hand one):

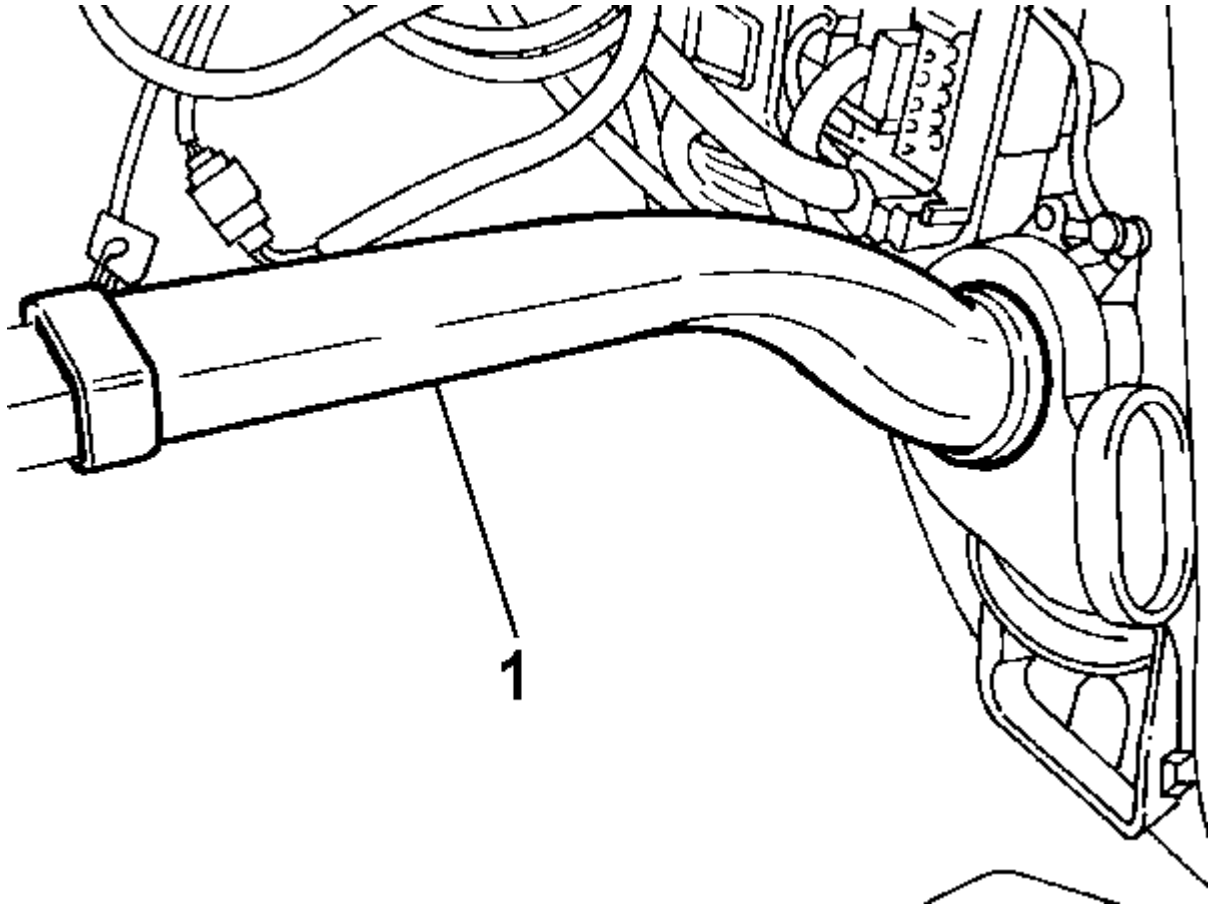

- Disconnect the electrical supplies (3)
- Remove the blower module connector (4) and clip (5)

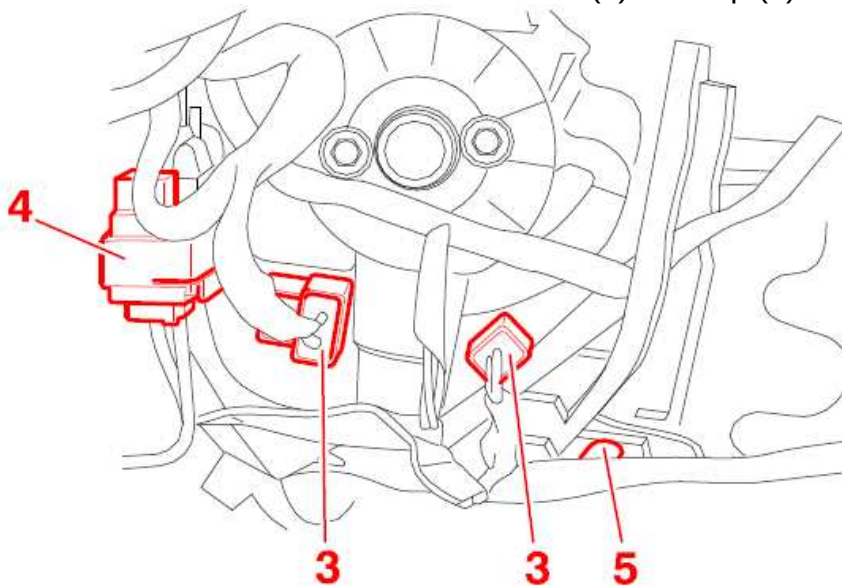

- Remove the two bolts (6)
- Remove the blower module. Take care to not damage the tabs (7)

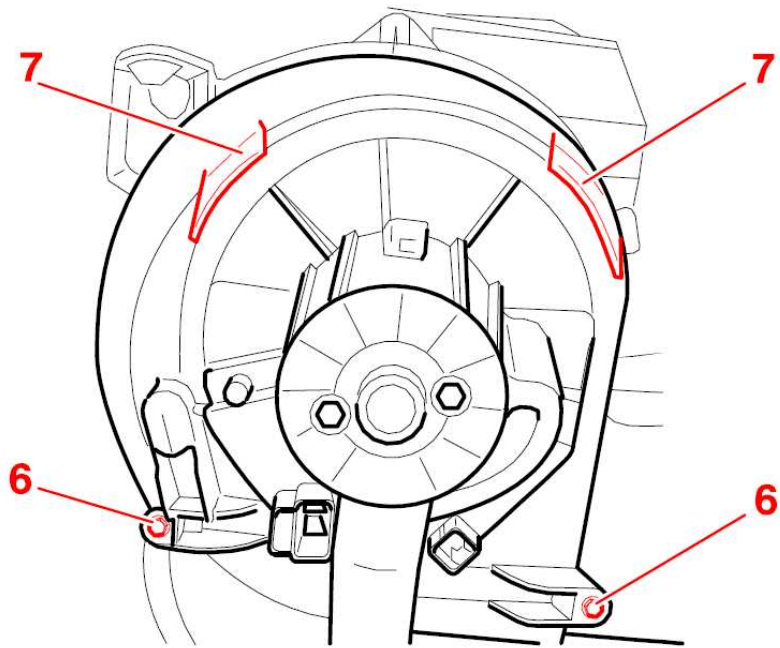

Here is another view of the blower module:

