

REMOVING - REFITTING : FRONT BUMPER

URGENT : If raising the vehicle on a lift, wheels hanging, remove the cap of the LDS fluid reservoir . refit the cap of the LDS fluid reservoir, once you have lowered the vehicle .

URGENT : Ensure that the precautions relating to safety and cleanliness are adhered to .

1. Removing

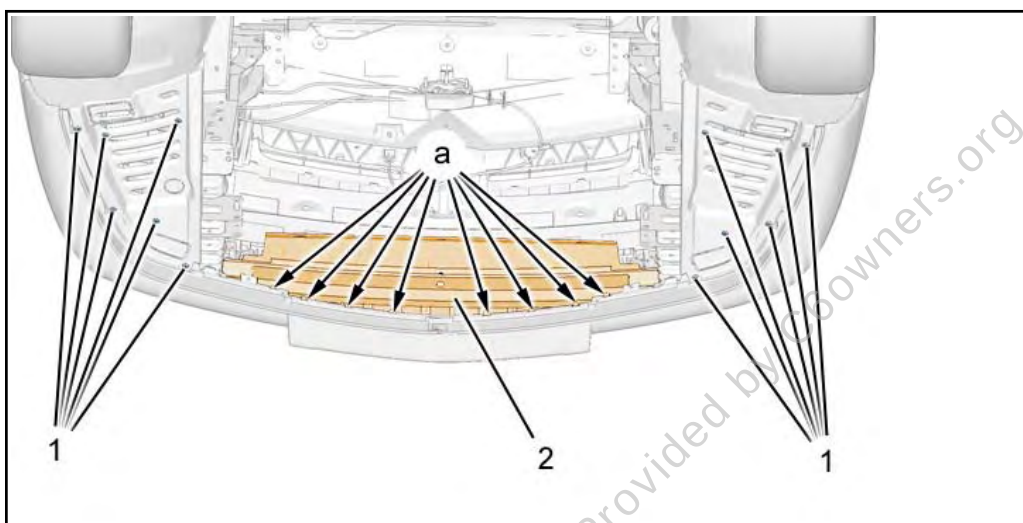


Figure : C4AP1HED

Detach the deflector (2) at "a" .

Remove :

- The deflector (2)
- The screws (1)

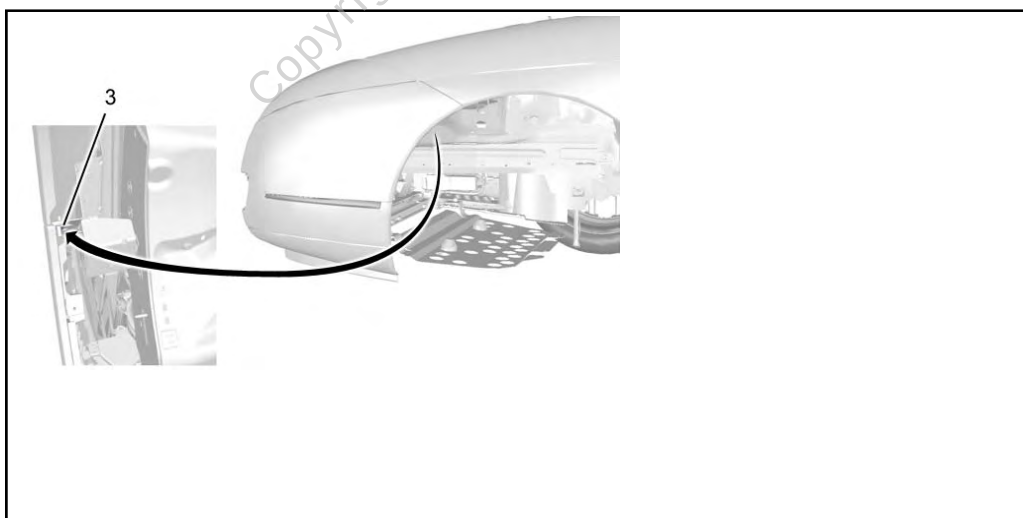


Figure : C4CP15FD

Remove the screw (3) (on each side) .

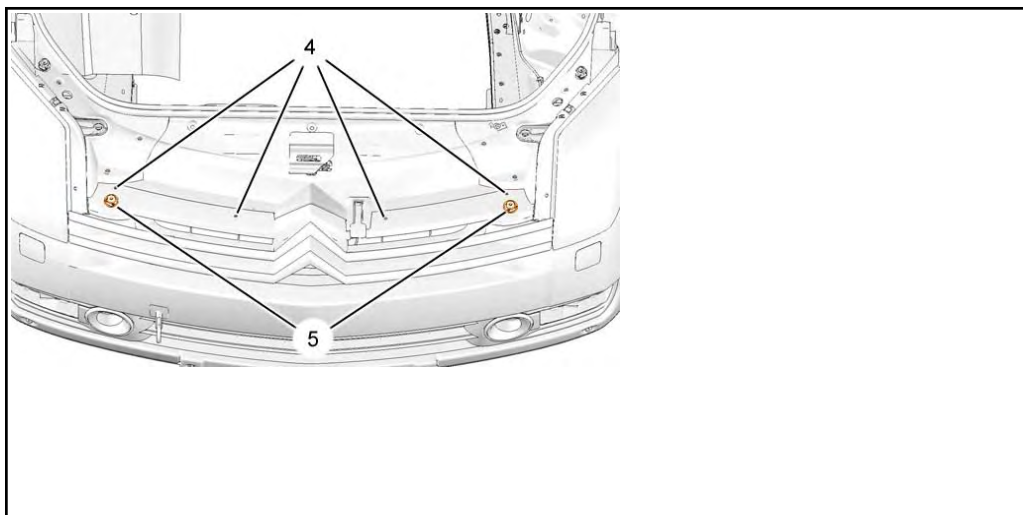


Figure : C4AP1HFD

Remove :

- The plastic pegs (4)
- The bonnet stops (5) unclip

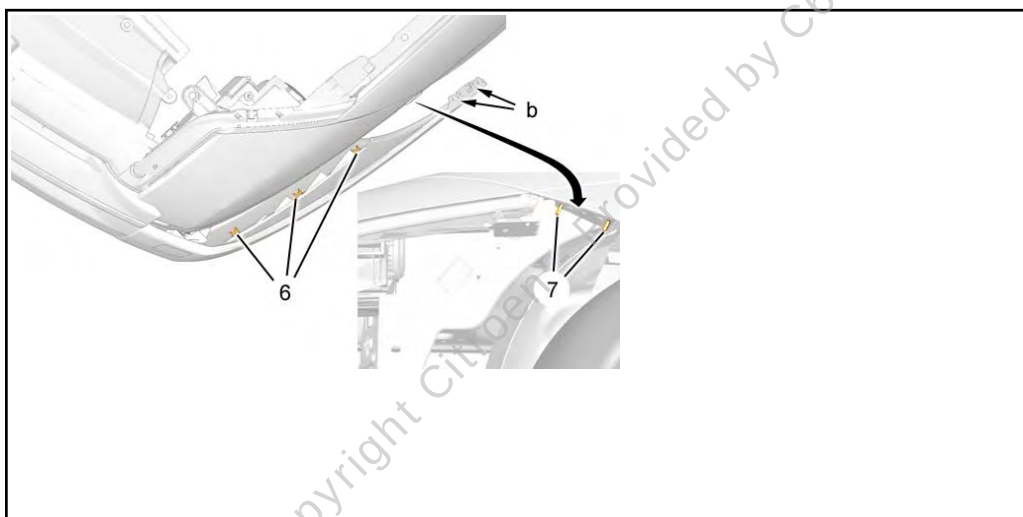


Figure : C4CP15GD

Unclip :

- The slots "b" from the metallic pins (7)
- The clips (6)
- The wiper circuit, from beside the non-return valve (RH side of the vehicle)

Disconnect the 2 connectors of the electrical harness (RH side of the vehicle) .
Remove the front bumper .

2. Refitting

Proceed in the reverse order to removal .

CAUTION : Engage the clips (6) in the front wing, and the notches "b" on the metallic pins (7) of the front wing (on each side) .